



**PINNACLE SCOPES**  
worldwide manufacturer & distributor of



## Hi-Spy Viewing Machines

[www.hispyviewing.com](http://www.hispyviewing.com) | [rod@hispyviewing.com](mailto:rod@hispyviewing.com)

### Operation of Audit

Here is how the digital readout audit board works:

The board will constantly show the number of coins/bills/etc the unit has accepted. This number will range from 0 - 9999. When it hits 9999 it will cycle back to 0 and start the count all over again. No one can reset the audit or make it go backward .

### Setting the Time

If you push SW2 on the board (lower button), the menu will change to display the time. For example: "t100". This means that you are in the time menu and the time is set for 100 seconds.

Pushing SW1 (upper button) while in the time menu will cycle the time up by 5 seconds. The time ranges from 30s to 180s. At 180 pushing SW1 will cycle the time back to 30. Push SW2 again to set the time.

If you are in the time menu and don't push any buttons for 2.5 seconds, the menu will exit and return you to the coin count screen without saving any changes. You must push SW2 to save the changes made in the time menu.

Removing the battery from the system will not cause the time to be lost. It is stored in non volatile memory.



Hi-Spy Viewing Machines are manufactured and distributed  
by Pinnacle Scopes. "Anything else is a compromise"  
[www.hispyviewing.com](http://www.hispyviewing.com)

